



1612 N Broad St
Lansdale, Pa 19446
215-362-7368

www.rental-world.com

44 W Ridge Pike
Limerick, Pa 19468
610-489-2334

Bull's Eye Toss

RC# 6505

Contents:

- | | |
|--------------------------------|---------------------------|
| 1. Backdrop | |
| 2. 1- Case | 4- Tapered Poles (large) |
| 1- Set of instructions | 4- Crimped Poles (medium) |
| 2- 4-way fittings w/ eye bolts | 4- Poles (small) |
| 2- Elbow fittings w/ eye bolts | 1- Crossbow |
| 4- Stakes | 15- Velcro Darts |



Assembly Instructions:

3&4. Insert the 4 crimped poles into outward facing holes of the 4-way fittings with crimped ends flat on the ground to maintain balance. Tighten eye bolts on fittings to secure poles.



5&6. Attach the 4 large tapered poles to the 4 small poles by inserting the tapered end of the large poles into the small poles.



7&8. Insert 1 set of connected poles into the inward facing holes of the 4-way fittings. Tighten eye bolts to secure the poles.




9. Insert 2 poles into the upward facing holes of the 4-way fittings. Tighten eye bolts to secure poles to fittings.



10&11. Attach elbow fittings to ends of connected poles. Tighten eye bolts to secure poles to fittings.



12. Slide open ends of elbow fittings into upright poles. Tighten eye bolts on fittings to secure poles to fittings.

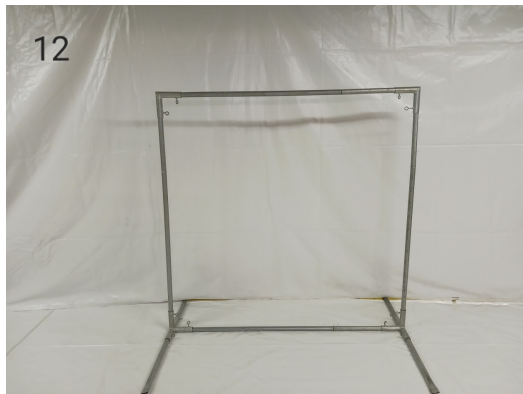

13. Attach backdrop to frame using velcro straps.



Safety Instructions:

1. Be sure that there is plenty of clearance (at least fifteen feet clearance on all sides) between the player and spectators.
2. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
3. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
4. NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!
5. Use caution when setting up or taking down the game. Once the bolts are loosened the sections of tubing can come apart and fall down causing injury.
6. Use only the darts included with the game.
7. NEVER ALLOW A PLAYER TO POINT THE CROSSBOW AT OR SHOOT ANOTHER PERSON OR ANIMAL.(Darts May cause serious eye injury.)
8. When a player is shooting, make sure nothing is in the string's path such as hair or fingers and nothing can be struck as the limb tips go forward during the shot.