

1612 N. BROAD STREET
LANSDALE, PA 19446
TEL: (215) 362-RENT (7368)
FAX: (215) 362-7525
E-MAIL: infolan@rental-world.com
www.rental-world.com

## EASY STRIKER INSTRUCTIONS

## BEFORE TOWING

- 1. CHECK COUPLER TO CONFIRM THAT IT IS FASTENED AND LOCKED DOWN TIGHT ON THE 2" BALL.
- 2. INSERT A 1/4" BOLT THROUGH COUPLER TO LOCK IT.
- 3. ATTACH SAFETY CHAINS CRIS CROSSING UNDER THE COUPLER. ADJUST CHAINS SO THEY DO NOT DRAG ON THE GROUND.
- 4. MAKE SURE SUPPORTING LEGS ARE FOLDED UP AND FASTENED AGAINST FRAME WITH CHAIN AND SECURED WITH THE WING NUT.

## SETTING UP

- 1. PLACE EASY STRIKER ON LEVEL GROUND. REMOVE NUT AND DISCONNECT CHAIN FROM THE SUPPORTING LEGS. SWING LEGS DOWN UNTIL THEY TOUCH THE GROUND. CONNECT THE CHAIN TO ONE OF THE ADJUSTMENT LINKS SO THAT THE CHAIN IS TIGHT AND THE LEGS ARE TOUCHING THE GROUND.
- 2. INSERT 4 STAKES INTO THE STAKE HOLES TO PREVENT EASY STRIKER FROM SLIDING OR ROCKING DURING USE.
- 3. SET CONES & ROPE IN THE STRIKING ZONE TO ENSURE THE SAFETY OF THE OPERATOR AND THE SPECTATORS. (SEE SKETCH BELOW)

## **OPERATION**

- 1. ONLY ONE PERSON AT A TIME IN THE STRIKING ZONE.
- 2. DO NOT OPERATE EASY STRIKER DURING STORMS, LIGHTING OR STRONG WINDS.
- 3. PERIODICALLY TIGHTEN BOLTS ON EASY STRIKER.
- 4. BEFORE EACH USE, INSPECT MALLET AND MAKE SURE HANDLE IS ON TIGHT.
- 5. DO NOT SET UP EASY STRIKER NEAR ELECTRICAL POWER LINES.
- 6. DO NOT ALLOW ANYONE TO CLIMB ON THE EASY STRIKER.

