


Frame Assembly -

SCREEN PROJECTOR OUTDOOR

Assemble frame laying down as shown in Picture 1.

Align the letters on the tubes with there corresponding tube to ensure proper assembly. (A to A, B to B e.)

Assemble the legs to the bottom of the frame using the 2 pins as shown in picture 2.

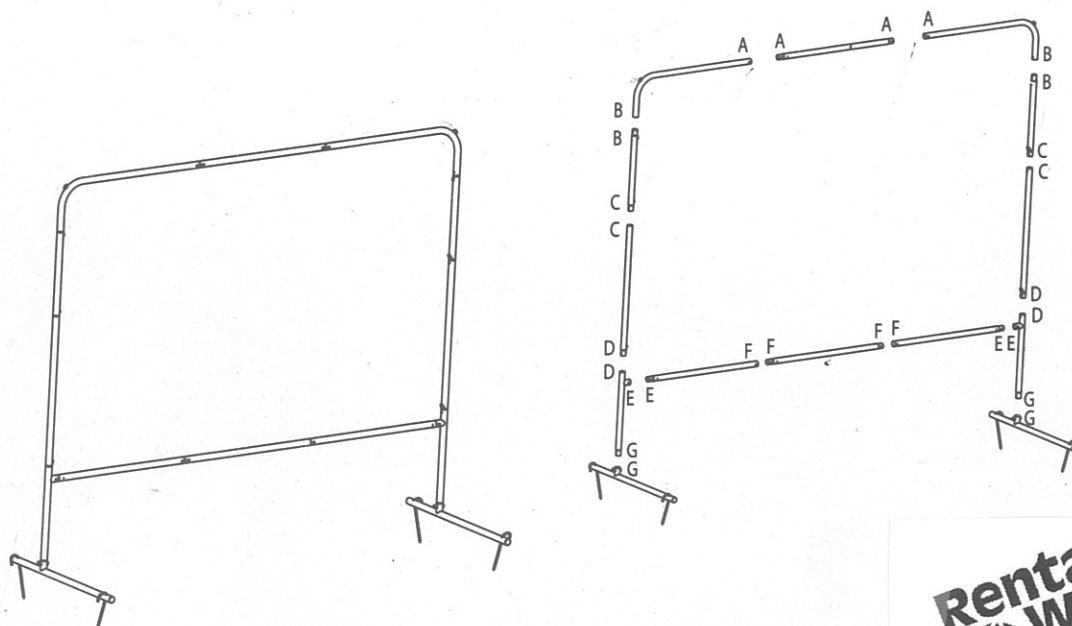

1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

Screen Assembly -

Slide the screen over the top of the frame of the screen centering the screen left to right as you go. The screen should be on the same side as the long part of the legs.

Fasten the straps around the bottom tube and to the back of the screen as shown.

The straps can be adjusted to pull the screen tight.

Attach 2 guy ropes to each of the top rings on the top of the frame for securing.

With 2 people stand the assembled screen upright. Stake the screen frame to the ground using the 4 stakes provided.

Using the guy wires and supplied guy wire stakes secure the frame to prevent it from moving around in windy conditions or tipping over.


Warning - Do not set this product up without securing it to the ground using both the frame stakes and the guy wires. Serious injury could occur.

Warning - Do not use in windy conditions over 20 MPH. Damage could occur to the screen and or personal injury could occur.

The screen should be removed from the frame after use. Constant exposure to the sun could damage the screen and will cause it to wear out faster.

Cleaning the screen - The screen can be cleaned using mild soap and water.

Minimizing Wrinkles - Although most wrinkles in the screen will not be noticeable in use it is best to take care to neatly fold or roll the screen before placing in its storage bag.

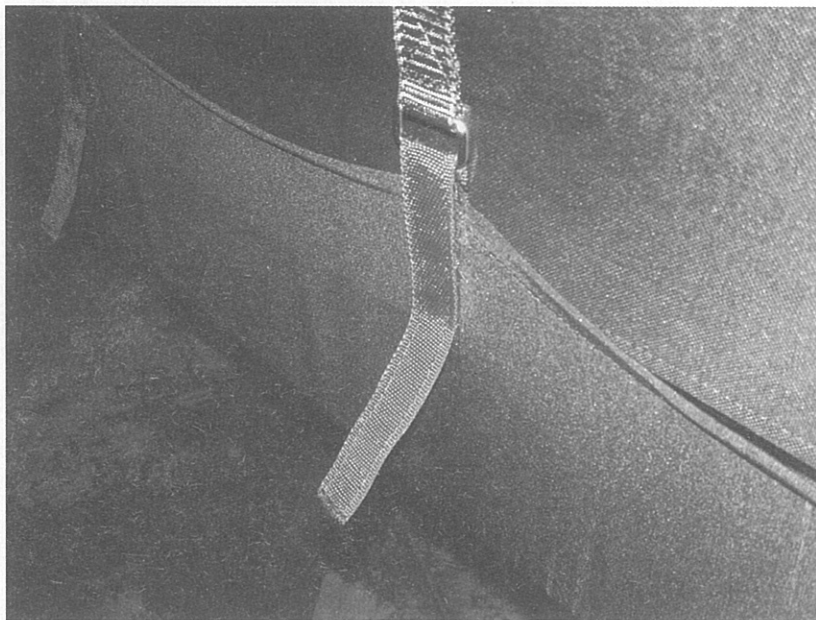

For a setup video go to www.outdoorcooking.com