



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334



SLIDE 13'

READ CAREFULLY BEFORE OPERATING UNIT.

NOTE: THERE IS A RECOMMENDED 100 LB WEIGHT LIMIT ON THE USE OF THE SLIDE.

A TRAINED SUPERVISOR IS REQUIRED AT ALL TIMES DURING OPERATION.

FAILURE TO FOLLOW PROPER OPERATING INSTRUCTIONS WILL RELEASE RENTAL WORLD OF ALL LIABILITY.

SETTING IT UP:

1. THE LOCATION CHOSEN FOR USE OF THIS UNIT MUST BE A RELATIVELY FLAT SMOOTH SURFACE (WOOD FLOOR, CONCRETE, PAVEMENT OR GRASS – NO GRAVEL, ROCKS OR OTHER OBJECTS SHOULD BE UNDER THE UNIT – FREE OF OVERHEAD OBSTRUCTIONS. USING A TARP UNDERNEATH THE INFLATABLE WILL REDUCE THE AMOUNT OF WEAR ON THE UNIT. NEVER OPERATE THE SLIDE ON A HARD SURFACE WITHOUT UNDERPADDING, ASTRO TURF OR INDOOR/OUTDOOR CARPET.
2. YOU SHOULD HAVE AT LEAST A 5-FOOT CLEARANCE AROUND THE UNIT WHEN INFLATED.
3. THE UNIT SHOULD BE ANCHORED. THERE ARE “D” RINGS AT EACH CORNER AT THE BOTTOM OF EACH SLIDE. ATTACH A ROPE TO THE “D” RINGS AND THEN TIE TO THE SANDBAGS OR STAKES. STAKES CAN BE USED IN GRASS. SANDBAGS OR OTHER ANCHORS SHOULD BE USED INDOORS. DO NOT STAKE THE SLIDE DOWN UNTIL THE UNIT IS FULLY INFLATED. (ON A WINDY DAY – LOOSELY STAKE DOWN UNTIL INFLATED.)
4. TURN THE HUFFER BLOWER ON. THE UNIT MUST BE FULLY INFLATED WHILE IN USE. THE BLOWER MUST RUN CONTINUOUSLY WHILE THE UNIT IS IN USE. THE ZIPPERED AIR RELEASE VENTS MUST BE KEPT CLOSED DURING OPERATION.
5. SLIDE PADS HAVE BEEN PROVIDED TO MAKE THE SLIDE SLIPPERY AND SAVE ON WEAR AND TEAR. THESE VELCRO ON THE UNITS.

6. IF THE AIR PRESSURE SEEMS LOW, DETERMINE IF THE AIR SUPPLY TUBE (FROM BLOWER TO UNIT) IS STRAIGHT WITHOUT BENDS, AND SECURELY TIED AROUND THE NECK OF THE BLOWER. ALSO, DETERMINE IF ALL AIR RELEASE VENTS ARE TIGHTLY CLOSED. AN OCCASIONAL CHECK FOR THIS CONDITION WILL HELP PREVENT PROBLEMS.
7. IF THE UNIT BEGINS TO DEFLATE, DISCONTINUE USE IMMEDIATELY. AFTER REMOVING THE PARTICIPANTS, CHECK TO SEE IF THE BLOWER IS RUNNING. IF NOT, CHECK THE OPERATING INSTRUCTIONS FOR THE BLOWER. IF THE BLOWER IS RUNNING AND THE UNIT IS DEFLATED, CHECK THE AIR RELEASE VENTS TO BE SURE THEY ARE ALL CLOSED AND THAT THERE IS NOT OBSTRUCTION TO THE INTAKE TUBE.
8. IF THE UNIT IS SET UP OUTSIDE AND SUDDEN SEVERE WEATHER OR HIGH WINDS OCCUR, REMOVE PARTICIPANTS AND DEFLATE THE UNIT.

THE BLOWER:

1. THE BLOWER SHOULD BE NO FURTHER THAN 50 FEET FROM A 110-VOLT, 20 AMP DEDICATED GROUNDED ELECTRICAL OUTLET. USE OF 12 GAUGE OR HEAVIER EXTENSION CORD IS RECOMMENDED.

CARING FOR THE SLIDE:

1. THE UNIT CAN EASILY BE CLEANED. JUST WIPE OR LIGHTLY SCRUB, USING A SOFT BRISTLE BRUSH AND VINYL CLEANER. BE SURE TO RINSE THOROUGHLY TO REMOVE ALL DETERGENT.

ATTENDANT GUIDELINES:

- PARTICIPANTS MUST BE MADE AWARE OF THE RULES FOR USE OF THE UNIT.
- AGE LIMIT – 10 AND UNDER
- ANYONE WEIGHING OVER 100 LBS SHOULD NOT BE ALLOWED ON THE SLIDE.
- DO NOT LET MORE THAN 2 CHILDREN AT A TIME STAY ON THE TOP OF THE SLIDE.
- CHILDREN WILL BE VERY EXCITED AND WANT TO SLIDE DOWN THE SLIDE MANY TIMES. BE SURE THE CHILDREN CLIMB THE SLIDE SLOWLY AND CAUTIOUSLY AS OTHER CHILDREN MAY STILL BE ON THE TOP.

- GROUP CHILDREN BY SIZE – LARGER KIDS SEPARATE FROM LITTLE ONES.
- ALWAYS SUPERVISE CLOSELY, A CHILDREN’S ACTIVITY SHOULD NEVER BE LEFT UNATTENDED.
- WEARING SHOES IS NOT ALLOWED. FACE PAINT, CHEWING GUM AND SHARP OBJECTS (JEWELRY, BUTTONS WITH PINS, ETC.) MUST NOT BE ALLOWED ON THE SLIDE.
- DO NOT LET CHILDREN JUMP ON THE LANDING PAD, KICK OR HIT THE SLIDE, DO FLIPS OR CLIMB UP THE SLIDES.
- KEEP SPECTATORS OFF THE LANDING PAD AND AWAY FROM THE SLIDE AT ALL TIMES.
- DO NOT CLIMB STAIRS WITHOUT AN ATTENDANT PRESENT.
- NO BODY CONTACT BETWEEN PARTICIPANTS.
- DO NOT BOUNCE AGAINST WALLS ON TOP. DO NOT BOUNCE ON TOP OF UNIT.
- THE UNIT SHOULD BE CHECKED BEFORE EACH EVENT AND DAILY DURING LENGTHY EVENTS FOR WEAR AND TEAR.
- IF THE UNIT BEGINS TO DEFLATE DISCONTINUE USE IMMEDIATELY.



SLIDE 13'