

Spin Art Double



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

SPIN ART USA

INSTRUCTIONS FOR ATTENDANT. PLEASE READ BEFORE SETTING UP OR OPERATING MACHINE.

FLYING DISCS

(FLYING DISC BRACKET MUST BE INSTALLED)

OPEN TOP DOOR AND PLACE FLYER ON BRACKET MAKING SURE ALL FOUR SIDES ARE SNAPPED IN PLACE. There is no need to press hard, as most flyers will easily set on bracket. Pressing down hard will only cause the bracket to bend down. Should the brackets become bent downward, merely straighten the arms back by using a gentle upward tug. Never open top door more than 90°, as this will apply undo stress on the hinge.

- CLOSE TOP DOOR. Door must remain closed while flyer is spinning to ensure safety.
- OPEN SWITCH COVER -If one is provided- AND FLIP THE SWITCH TO THE "ON" POSITION. The switch is located on backside of machine.
- INSTRUCT THE PAINTER (customer) TO POINT THE TIP OF THE PAINT BOTTLE THRU THE TOP DOOR SCREEN AND GENTLY SQUEEZE THE PAINT BOTTLE UNTIL THE DESIRED AMOUNT HAS BEEN DISPENSED. Remember to advise the painter to place the bottle tip through the screen, as screens can be hard to clean when paint builds up on them.
- WHEN THE FLYER IS READY TO BE STOPPED, FLIP THE SWITCH TO THE "OFF" POSITION. Gently pull on the leather strap as this will aid in the bracket coming to a timely stop.
- OPEN TOP DOOR AFTER THE FLYER HAS COME TO A COMPLETE STOP. Never open door while flying disc is spinning.
- TO REMOVE DISC: LIFT DISC OFF BRACKET. As you reach under the disc, check to see that you are lifting between the bracket arms. If not, simply rotate the disc so you are now grabbing between the arms.

CARDS

(CARD BRACKET MUST BE INSTALLED)

OPEN TOP DOOR AND PLACE A 1" PIECE OF DOUBLE STICK ADHESIVE TAPE ON CENTER OF BRACKET. A SMALL PIECE OF DUCT TAPE ROLLED BACK ONTO ITSELF WORKS BEST. PLACE A CARD ON BRACKET MAKING SURE ALL FOUR SIDES ARE LINED UP IN PLACE. SAME ADHESIVE MAY BE USED FOR SEVERAL CARDS. Never open top door more than 90° as this will apply undo stress on the hinge.

- CLOSE TOP DOOR. Door must remain closed while card is spinning to ensure safety.
- OPEN SWITCH COVER -If one is provided- AND FLIP THE SWITCH TO THE "ON" POSITION. The switch is located on backside of machine.
- INSTRUCT THE PAINTER (customer) TO POINT THE TIP OF THE PAINT BOTTLE THRU THE TOP DOOR SCREEN AND GENTLY SQUEEZE THE PAINT BOTTLE UNTIL THE DESIRED AMOUNT HAS BEEN DISPENSED. Remember to advise the painter to place the bottle tip through the screen, as screens can be hard to clean when paint builds up on them.
- WHEN THE CARD IS READY TO BE STOPPED, FLIP THE SWITCH TO THE "OFF" POSITION. Gently pull on the leather strap (brake) as this will aid in the bracket coming to a timely stop.
- OPEN TOP DOOR AFTER THE CARD HAS COME TO A COMPLETE STOP. Never open door while card is spinning.
- TO REMOVE CARD, GRASP ONE SIDE OF THE CARD AND LIFT UPWARD. When using frames, slip the card into a frame. The card can be carried away while it is still wet if it is in the frame.

Your warranty will be void if you use a product in your machine other than product supplied from Spin Art USA.

CARE OF MACHINE AND SUPPLIES

Wipe paint bottle tips frequently. Use a large paper clip to unclog tips should they dry up.

Keep a damp washcloth handy to wipe tabletop should any paint end up there (customers will tend to wipe their fingers on the table if they somehow get paint on them). We recommend using a water-based paint. We sell a latex based water-based paint.

Electrical cord will travel best if it is wound up and secured to the bottom of machine using twist ties.

All our machines come with a permanent plastic liner. For cleaning, at the end of an event, the most practical way is to simply let the paint dry and then pull it out. If build-up is excessive, use paper towels to wipe paint away. Or if you desire to completely remove the liner for cleaning this is easily done by removing the bracket using a 5/32" allen wrench. Loosen the setscrew and remove bracket. Remove the liner and wash and dry it and replace into machine. Now replace the bracket, making sure that the flat side of the shaft lines up with the set screw in the collar. Retighten screw.

On models with optional fold-up legs, be careful not to crush electrical cords when lowering and raising legs. Never lay machine on its backside on the switches. This may damage the switches.

USE UNDER ADULT SUPERVISION. NEVER SUBMERGE MACHINE IN WATER.

For questions or technical support, please feel free to contact us.

Email info@spinartusa.com anytime or phone 425-754-1142 Noon-8PM

MOST OF ALL HAVE FUN. SPIN ART USA-WHERE THERE'S FUN AT EVERY TURN!