 




1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

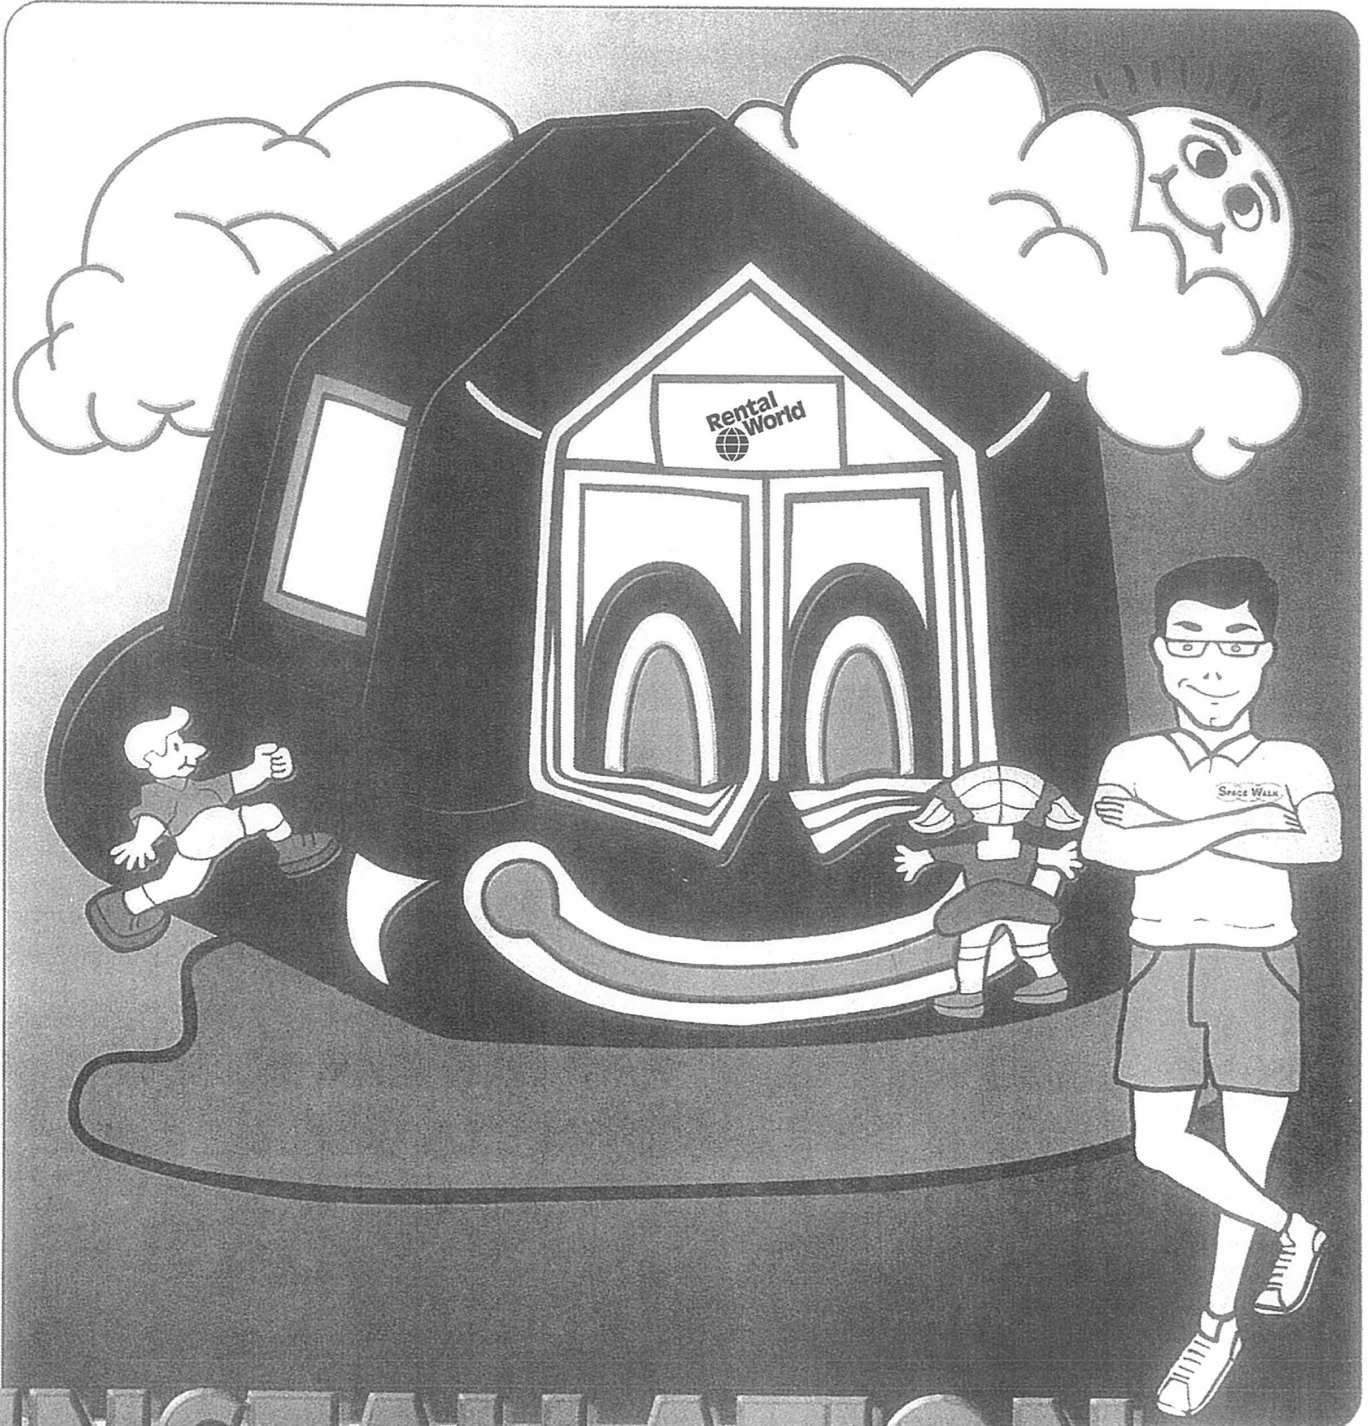 


INSTALLATION

SETTING IT UP




The bounce has four parts - the unit, blower(s), extension cord(s), and anchors. Select an area..

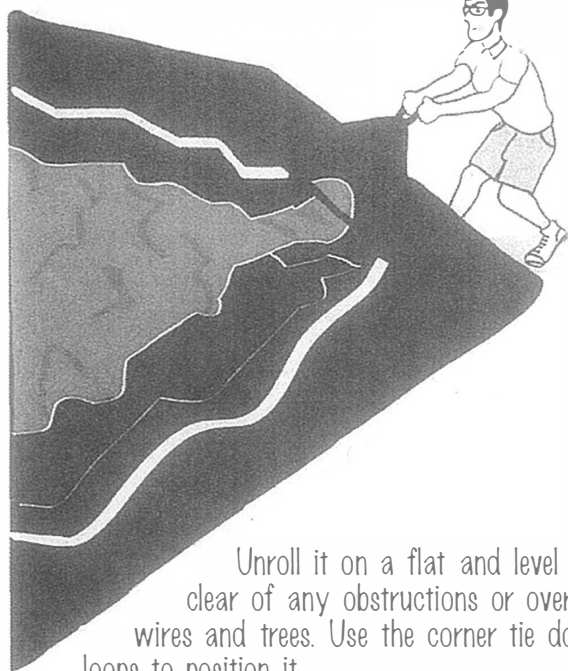

Unroll it on a flat and level surface clear of any obstructions or overhead wires and trees. Use the corner tie down loops to position it.



 Using the strap provided, clip or tie one of the blower necks closed.

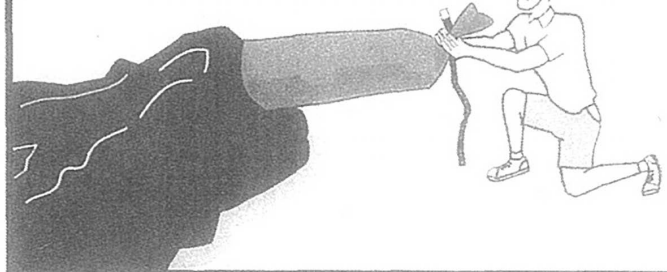

Slip the other open neck, in the rear of the unit, snugly around the blower outlet & secure it with the safety clip.



Use only the extension cord provided with each unit.



Plug each blower into a 110 volt electrical outlet. Make sure the outlet has either a dedicated 20 AMP or larger circuit, or a 30 AMP fused circuit. The blower should be the only thing plugged into that circuit. If two blowers are required they must be on separate circuits.



Inflation takes less than five minutes. the blower runs continuously while the bounce is in use
*never unplug the blower while in use.
Once inflated, the unit can be repositioned then anchored into final position.

 


The Bounce Must Be Anchored!

Pass end of anchor through the loop of the tie down strap & then hammer the anchor to the ground.

Stake should be within 12 inches from the unit to prevent tipping.



To test the anchor, pull up with a firm lifting force to assure it is secure.

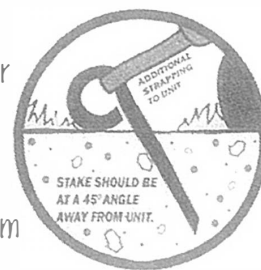

TAKING IT DOWN



  Remove riders from the unit and unplug blower. Disconnect the blower from the unit and open the blower necks.

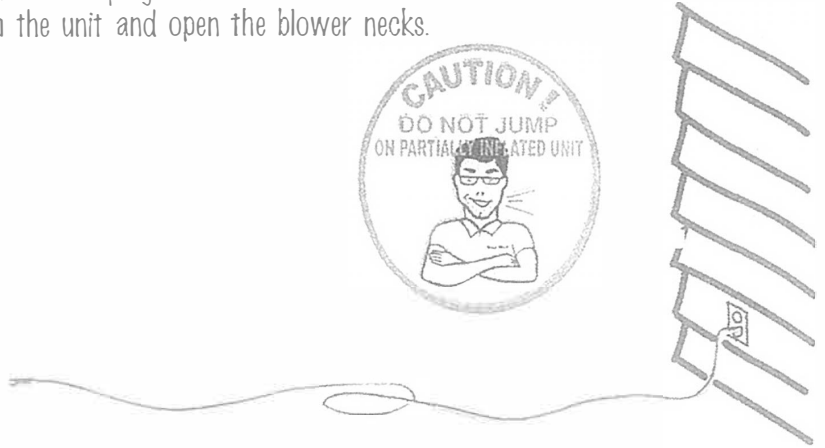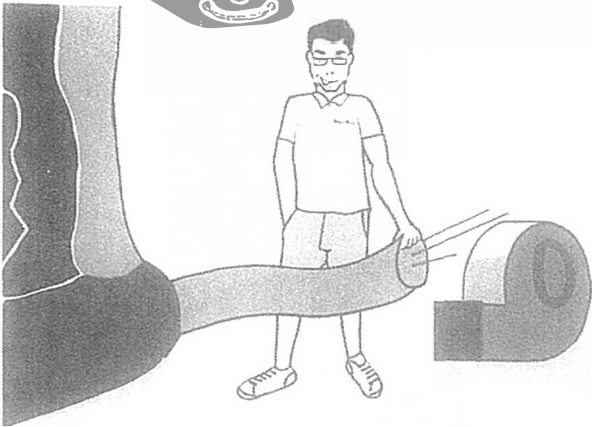

When the unit is deflated, fold each side to the center.

 


Next, fold in half again to form single width.


Takes 3 folds!



Starting from the door, roll the unit toward the rear pushing any excess air from the inflatable.

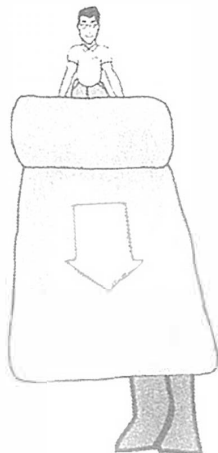

 Tuck in the blower necks & place the tie straps under the unit; then tie the bundle so it is secure.

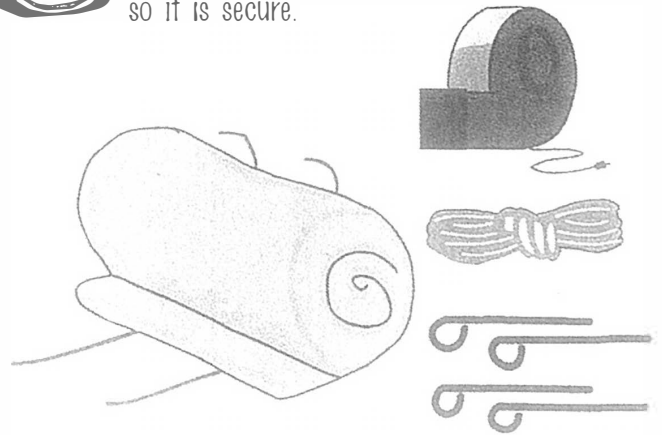

TROUBLE SHOOTING

If the unit is soft, check the following:

- ▶ Are all the unused blower necks tied off?
- ▶ Blower neck (attached to blower) must be straight with no bends or kinks to allow maximum air flow.
- ▶ Check the blower intake screens for debris blocking airflow.

Is the blower not working? Check the following:

- ▶ Is the blower plugged into extension cord?
- ▶ Is extension cord plugged into receptacle?
- ▶ Check receptacle with small electrical device such as lamp or hair dryer. If not working check fuses/circuit breaker.

RULES

- ▶ The inflatable must be anchored prior to use.
- ▶ In case of rain, remove riders and unplug blower and extension cord from electrical outlet.
- ▶ In case of high winds, remove riders, unplug blower and deflate.
- ▶ Never jump or play on partially inflated unit.
- ▶ Do not allow riders to play or climb on outside walls, sides or roof of unit.
- ▶ Always follow the suggested number of riders listed on contract. Suggested number for standard unit is 8.
- ▶ Riders must remove shoes, eyeglasses and other sharp objects before entering unit.
- ▶ Do not plug or unplug blower repeatedly as it will cause it to burn up.
- ▶ Never put a hose or water on unit.
- ▶ Always have an adult present to supervise riders.
- ▶ Do not allow riders to hang on or pull netting or columns.
- ▶ Do not allow flips, horseplay, wrestling or roughhousing on unit.
- ▶ Follow all rules posted on unit and blower.
- ▶ Keep blower and cord away from moisture to avoid electrical shock.

 
**Absolutely
NO SILLY STRING
On Units!**

MORE INFORMATION CAN BE OBTAINED BY CALLING



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

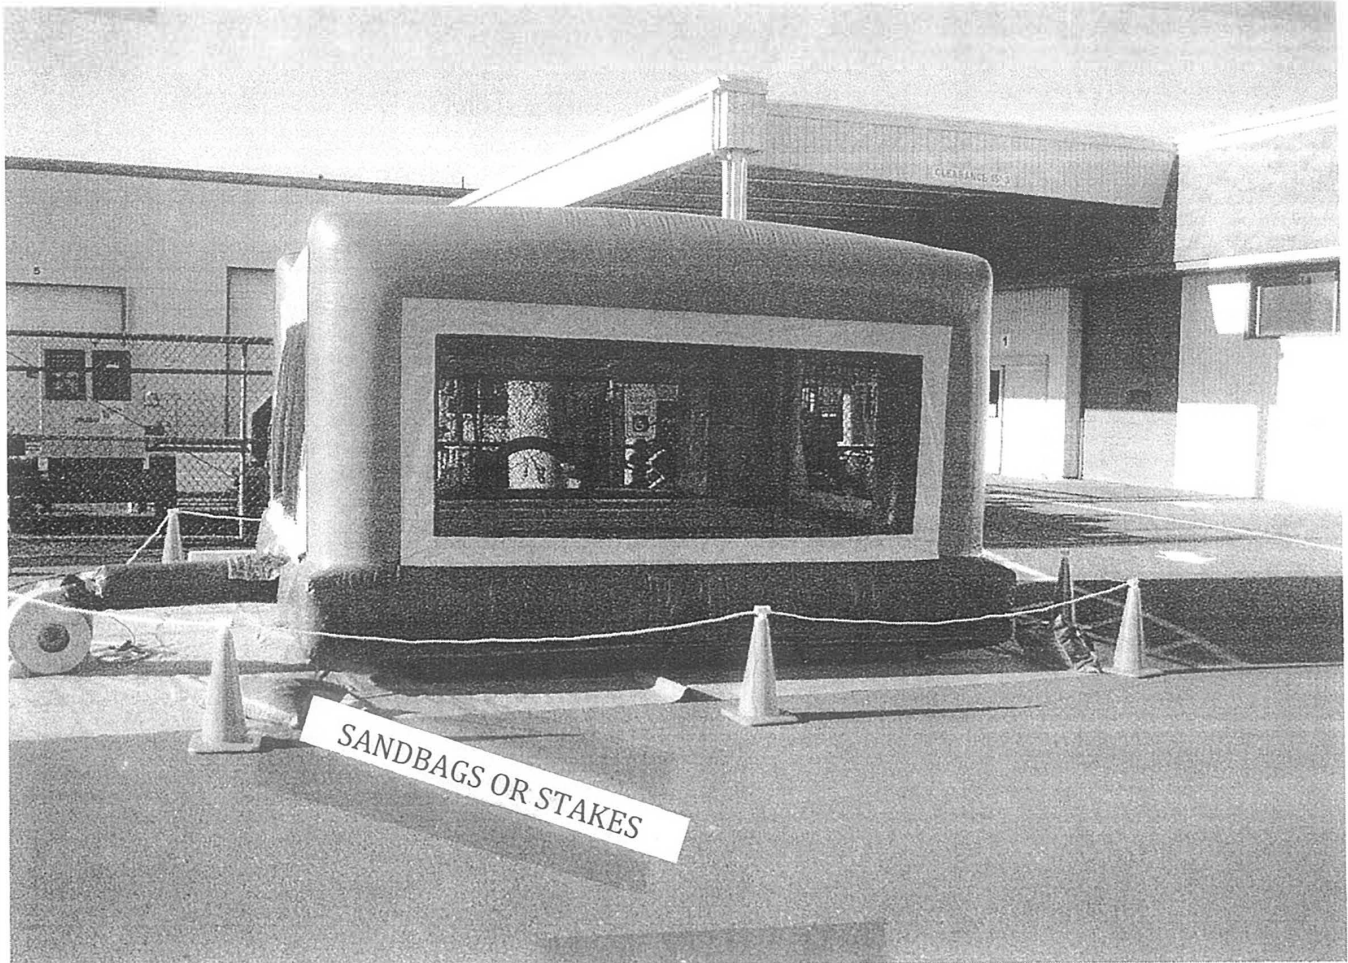

YOUTH MODULE